



15730 - WFC3 UVIS Internal Flats

Cycle: 27, Proposal Category: CAL/WFC3

(Availability Mode: RESTRICTED)

INVESTIGATORS

<i>Name</i>	<i>Institution</i>	<i>E-Mail</i>
Mr. Harish Khandrika (PI) (Contact)	Space Telescope Science Institute	hkhandrika@stsci.edu
Benjamin Kuhn (CoI) (Contact)	Space Telescope Science Institute	bkuhn@stsci.edu
Ms. Jennifer Mack (CoI) (Contact)	Space Telescope Science Institute	mack@stsci.edu

VISITS

<i>Visit</i>	<i>Targets used in Visit</i>	<i>Configurations used in Visit</i>	<i>Orbits Used</i>	<i>Last Orbit Planner Run</i>	<i>OP Current with Visit?</i>
01	DEUTERIUM	WFC3/UVIS	1	10-Jul-2019 15:00:35.0	yes
02	DEUTERIUM	WFC3/UVIS	1	10-Jul-2019 15:00:36.0	yes
03	DEUTERIUM	WFC3/UVIS	1	10-Jul-2019 15:00:37.0	yes
04	TUNGSTEN	WFC3/UVIS	1	10-Jul-2019 15:00:38.0	yes
05	TUNGSTEN	WFC3/UVIS	1	10-Jul-2019 15:00:38.0	yes
06	TUNGSTEN	WFC3/UVIS	1	10-Jul-2019 15:00:39.0	yes
07	TUNGSTEN	WFC3/UVIS	1	10-Jul-2019 15:00:39.0	yes
08	TUNGSTEN	WFC3/UVIS	1	10-Jul-2019 15:00:40.0	yes
09	TUNGSTEN	WFC3/UVIS	1	10-Jul-2019 15:00:41.0	yes
10	TUNGSTEN	WFC3/UVIS	1	10-Jul-2019 15:00:41.0	yes
11	TUNGSTEN	WFC3/UVIS	1	10-Jul-2019 15:00:42.0	yes
12	TUNGSTEN	WFC3/UVIS	1	10-Jul-2019 15:00:42.0	yes

<i>Visit</i>	<i>Targets used in Visit</i>	<i>Configurations used in Visit</i>	<i>Orbits Used</i>	<i>Last Orbit Planner Run</i>	<i>OP Current with Visit?</i>
13	TUNGSTEN	WFC3/UVIS	1	10-Jul-2019 15:00:43.0	yes

13 Total Orbits Used

ABSTRACT

In order to monitor the stability of the UVIS pixel-to-pixel sensitivity, the functionality of the filters, and the Tungsten lamp, internal flats are taken across all 62 UVIS filters. The monitor uses both the Tungsten and Deuterium lamps, the former for optical and the latter for UV wavelengths. This is a continuation of the proposals 12337 (Cy 18), 12711 (Cy 19), 13097 (Cy 20), 13568 (Cy 21), 14028 (Cy 22), 14390 (Cy 23), 14547 (Cy 24), 14997 (Cy 25), and 15590 (Cy 26).

OBSERVING DESCRIPTION

This program consists of 3 orbits with the D2 lamp for the following filters: F218W, F200LP, F225W, F275W, F280N, F300X, F336W, F343N, F373N, F390M, F390W, F395N, FQ232N, FQ243N, FQ378N, and FQ387N.

8 orbits will be taken with the Tungsten lamp for the remaining 46 filters.

Observations in the 4 filters, F390W, F438W, F606W, and F814W with the Tungsten lamp will be repeated 2 times over the cycle for a total of 2 orbits.


----- Calibration Justification -----

We will compare the flat fields taken in this cycle to the SMOV flat fields to check for any temporal change in the illumination pattern/brightness of the lamps, and serves as a way to monitor the health of all of the UVIS filters.

Proposal 15730 - D2 (01) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:43 GMT 2019


Visit	Proposal 15730, D2 (01) Diagnostic Status: Warning Scientific Instruments: WFC3/UVIS Special Requirements: BETWEEN 01-DEC-2019:00:00:00 AND 01-FEB-2020:00:00:00: GROUP 01,02,03 WITHIN 30D									
Diagnostics	(D2 (01)) Warning (Orbit Planner): MAXIMUM DURATION EXCEEDED FOR INTERNAL OR EARTH CALIB SU (D2 - Flat #1 F343N (01.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser (D2 - Flat #1 F275W (01.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser (D2 - Flat #1 FQ387N (01.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser (D2 - Flat #1 F225W (01.004)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser (D2 - Flat #1 F395N (01.005)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser (D2 - Flat #1 FQ232N (01.006)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser (D2 - Flat #1 F390W (01.007)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser									
Exposures	#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit
1	D2 - Flat #1 F343N	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F343N	CURRENT=MEDIU M			139.0 Secs (139 Secs) [==>]	[1]	
<i>Comments: #1 of 1 flats in set A-D2</i>										
2	D2 - Flat #1 F275W	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F275W	CURRENT=MEDIU M			34.7 Secs (34.7 Secs) [==>]	[1]	
<i>Comments: #1 of 1 flats in set A-D2</i>										
3	D2 - Flat #1 FQ387N	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS-QUAD	FQ387N	CURRENT=MEDIU M			860.0 Secs (860 Secs) [==>]	[1]	
<i>Comments: #1 of 3 exp in set A-D2, 3 exp per flat</i>										
4	D2 - Flat #1 F225W	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F225W	CURRENT=MEDIU M			16.6 Secs (16.6 Secs) [==>]	[1]	
<i>Comments: #1 of 2 flats in set A-D2</i>										
5	D2 - Flat #1 F395N	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F395N	CURRENT=MEDIU M			664.0 Secs (664 Secs) [==>]	[1]	
<i>Comments: #1 of 1 flats in set A-D2</i>										
6	D2 - Flat #1 FQ232N	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS-QUAD	FQ232N	CURRENT=MEDIU M			475.0 Secs (475 Secs) [==>]	[1]	
<i>Comments: #1 of 3 exp in set A-D2, 3 exp per flat, but longer than others</i>										
7	D2 - Flat #1 F390W	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F390W	CURRENT=MEDIU M			56.0 Secs (56 Secs) [==>]	[1]	
<i>Comments: #1 of 2 flats in set A-D2</i>										

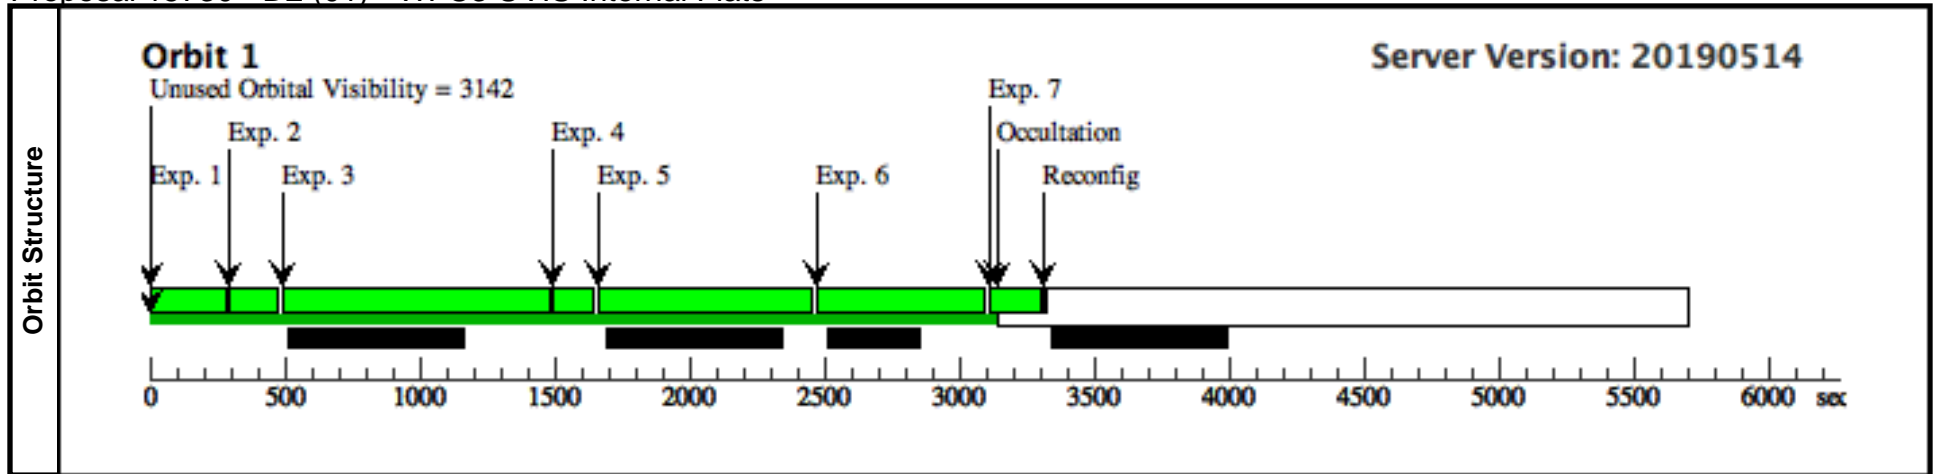

Proposal 15730 - D2 (02) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:43 GMT 2019

Visit	Proposal 15730, D2 (02) Diagnostic Status: Warning Scientific Instruments: WFC3/UVIS Special Requirements: (none)									
Diagnostics	(D2 (02)) Warning (Orbit Planner): MAXIMUM DURATION EXCEEDED FOR INTERNAL OR EARTH CALIB SU (D2 - Flat #1 F200LP (02.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser (D2 - Flat #2 F390W (02.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser (D2 - Flat #2 FQ387N (02.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser (D2 - Flat #2 FQ232N (02.004)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser (D2 - Flat #2 F275W (02.005)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser (D2 - Flat #1 F373N (02.006)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser (D2 - Flat #1 F336W (02.007)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser									
Exposures	#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit
1	D2 - Flat #1 F200LP	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F200LP	CURRENT=MEDIU M			3.4 Secs (3.4 Secs) [==>]	[1]	
<i>Comments: #1 of 1 flats in set A-D2</i>										
2	D2 - Flat #2 F390W	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F390W	CURRENT=MEDIU M			56.0 Secs (56 Secs) [==>]	[1]	
<i>Comments: #2 of 2 flats in set A-D2</i>										
3	D2 - Flat #2 FQ387N	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS-QUAD	FQ387N	CURRENT=MEDIU M			860.0 Secs (860 Secs) [==>]	[1]	
<i>Comments: #2 of 3 exp in set A-D2, 3 exp per flat</i>										
4	D2 - Flat #2 FQ232N	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS-QUAD	FQ232N	CURRENT=MEDIU M			475.0 Secs (475 Secs) [==>]	[1]	
<i>Comments: #2 of 3 exp in set A-D2, 3 exp per flat</i>										
5	D2 - Flat #2 F275W	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F275W	CURRENT=MEDIU M			34.7 Secs (34.7 Secs) [==>]	[1]	
<i>Comments: #1 of 1 flats in set A-D2</i>										
6	D2 - Flat #1 F373N	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F373N	CURRENT=MEDIU M			664.0 Secs (664 Secs) [==>]	[1]	
<i>Comments: #1 of 2 flats in set A-D2, but shorter than other</i>										
7	D2 - Flat #1 F336W	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F336W	CURRENT=MEDIU M			58.8 Secs (58.8 Secs) [==>]	[1]	
<i>Comments: #1 of 2 flats in set A-D2</i>										

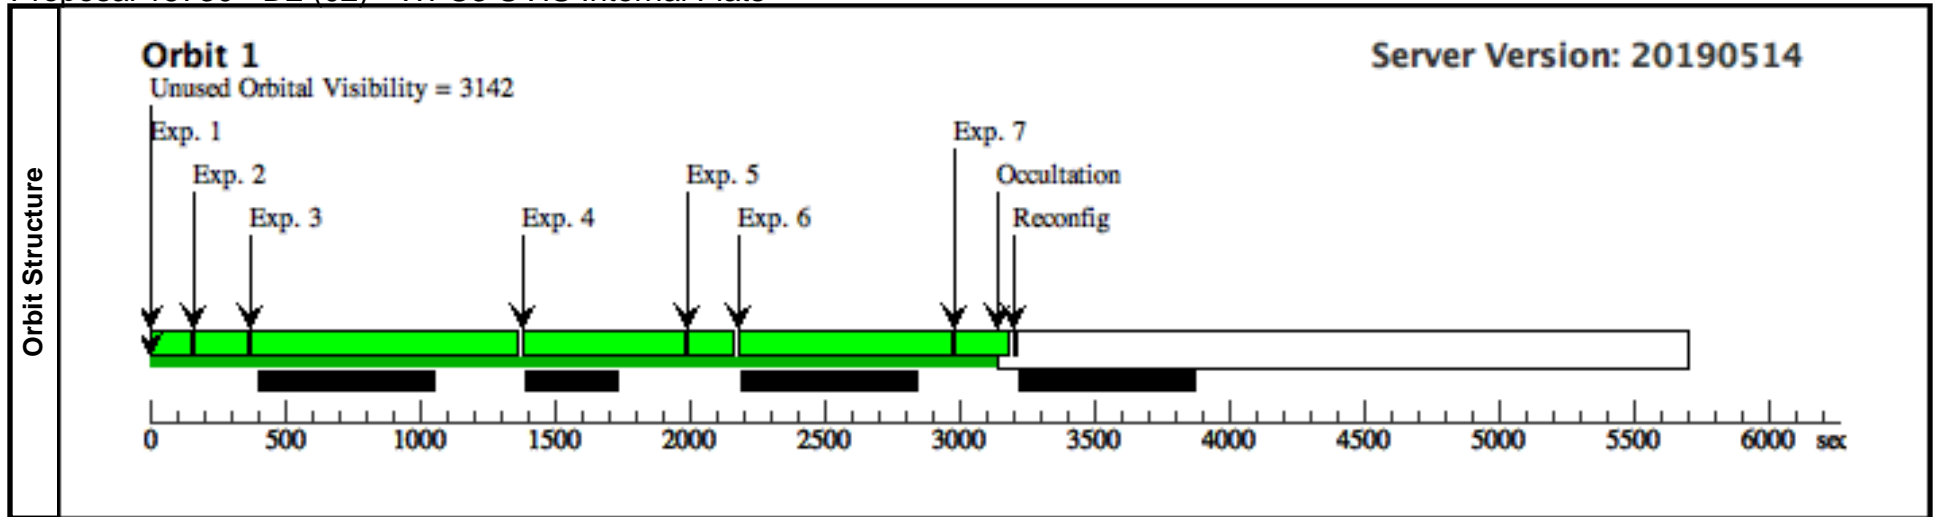

Proposal 15730 - D2 (03) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:43 GMT 2019

Visit	Proposal 15730, D2 (03)
	Diagnostic Status: Warning
	Scientific Instruments: WFC3/UVIS
	Special Requirements: (none)

Diagnostics

(D2 (03)) Warning (Orbit Planner): MAXIMUM DURATION EXCEEDED FOR INTERNAL OR EARTH CALIB SU

(D2 - Flat #1 F300X (03.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

(D2 - Flat #1 F390M (03.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser


(D2 - Flat #3 FQ387N (03.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

(D2 - Flat #1 F218W (03.004)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

(D2 - Flat #1 F280N (03.005)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

(D2 - Flat #2 F336W (03.006)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit
1	D2 - Flat #1 F300X	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F300X	CURRENT=MEDIUM			16.8 Secs (16.8 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-D2</i>									
2	D2 - Flat #1 F390M	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F390M	CURRENT=MEDIUM			271.0 Secs (271 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-D2</i>									
3	D2 - Flat #3 FQ387N	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS-QUAD	FQ387N	CURRENT=MEDIUM			860.0 Secs (860 Secs) [==>]	[1]
<i>Comments: #1 of 3 exp in set A-D2, 3 exp per flat</i>									
4	D2 - Flat #1 F218W	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F218W	CURRENT=MEDIUM			35.0 Secs (35 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-D2</i>									
5	D2 - Flat #1 F280N	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F280N	CURRENT=MEDIUM			845.0 Secs (845 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-D2</i>									
6	D2 - Flat #2 F336W	DEUTERIUM	WFC3/UVIS, ACCUM, UVIS	F336W	CURRENT=MEDIUM			58.8 Secs (58.8 Secs) [==>]	[1]
<i>Comments: #2 of 2 flats in set A-D2</i>									

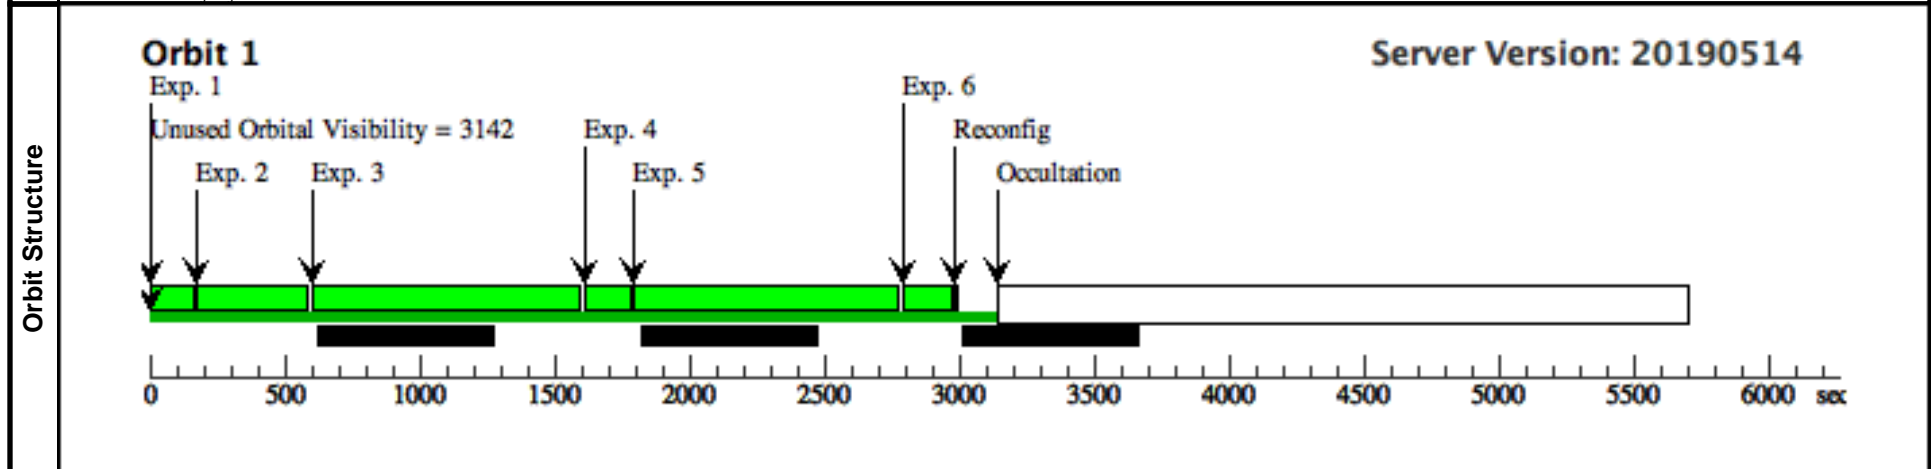


Proposal 15730 - Tu (04) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:43 GMT 2019

Visit	Proposal 15730, Tu (04) Diagnostic Status: Warning Scientific Instruments: WFC3/UVIS Special Requirements: BETWEEN 01-MAR-2020:00:00:00 AND 30-APR-2020:00:00:00
--------------	---

Diagnostics	(Tu (04)) Warning (Orbit Planner): MAXIMUM DURATION EXCEEDED FOR INTERNAL OR EARTH CALIB SU
	(Tu - Flat #1 F350LP (04.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
	(Tu - Flat #1 F600LP (04.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
	(Tu - Flat #1 F469N (04.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
	(Tu - Flat #1 F200LP (04.004)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

Exposures	#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit	
	1	Tu - Flat #1 F350LP	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F350LP					1.2 Secs (1.2 Secs) [==>]	[1]
	<i>Comments: #1 of 1 flats in set A-Tu</i>										
	2	Tu - Flat #1 F600LP	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F600LP					1.3 Secs (1.3 Secs) [==>]	[1]
	<i>Comments: #1 of 1 flats in set A-Tu</i>										
3	Tu - Flat #1 F469N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F469N					1000 Secs (1000 Secs) [==>]	[1]	
<i>Comments: #1 of 1 flats in set A-Tu</i>											
4	Tu - Flat #1 F200LP	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F200LP					1.4 Secs (1.4 Secs) [==>]	[1]	
<i>Comments: #1 of 1 flats in set A-Tu</i>											

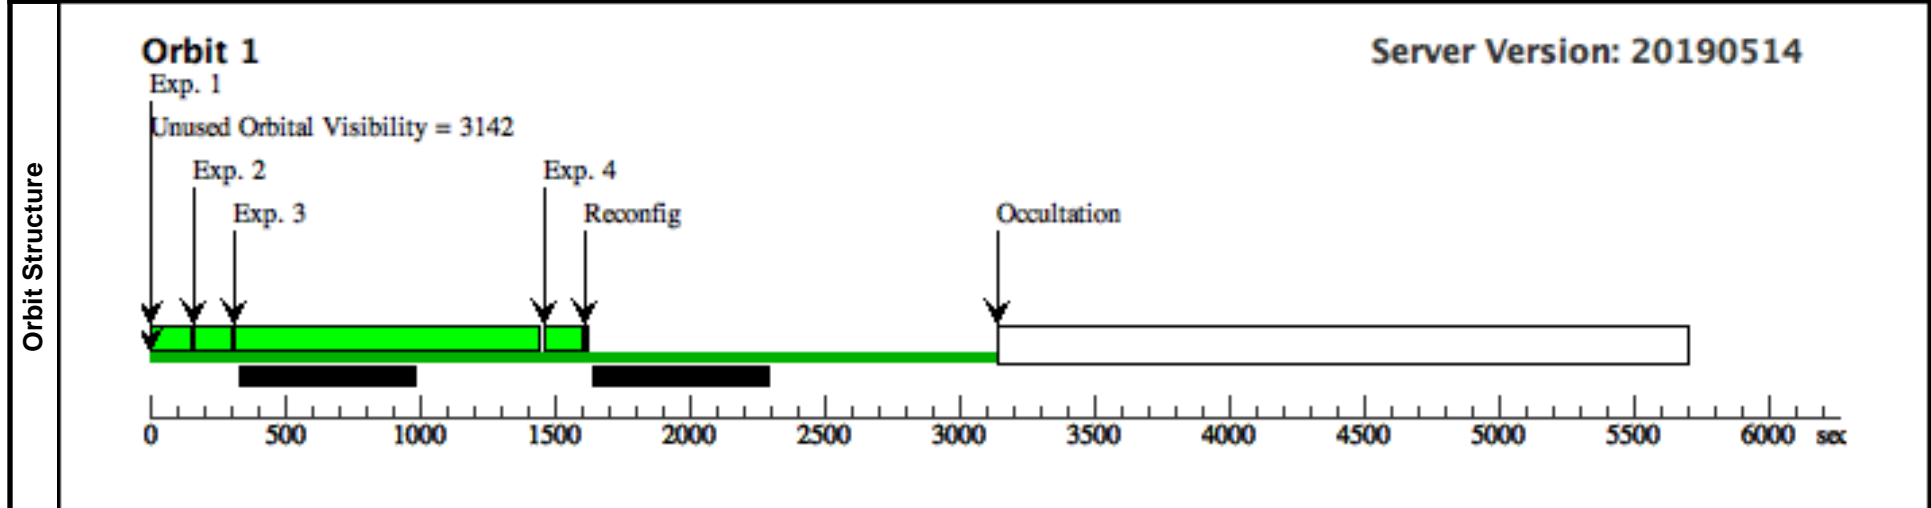


Proposal 15730 - Tu (05) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:43 GMT 2019

Visit
Proposal 15730, Tu (05)
Diagnostic Status: Warning
 Scientific Instruments: WFC3/UVIS
 Special Requirements: BETWEEN 01-MAR-2020:00:00:00 AND 30-APR-2020:00:00:00

Diagnostics
 (Tu - Flat #1 F763M (05.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F467M (05.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F953N (05.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit
1	Tu - Flat #1 F763M	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F763M				5.9 Secs (5.9 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									
2	Tu - Flat #1 F467M	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F467M				409.0 Secs (409 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									
3	Tu - Flat #1 F953N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F953N				74.0 Secs (74 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									

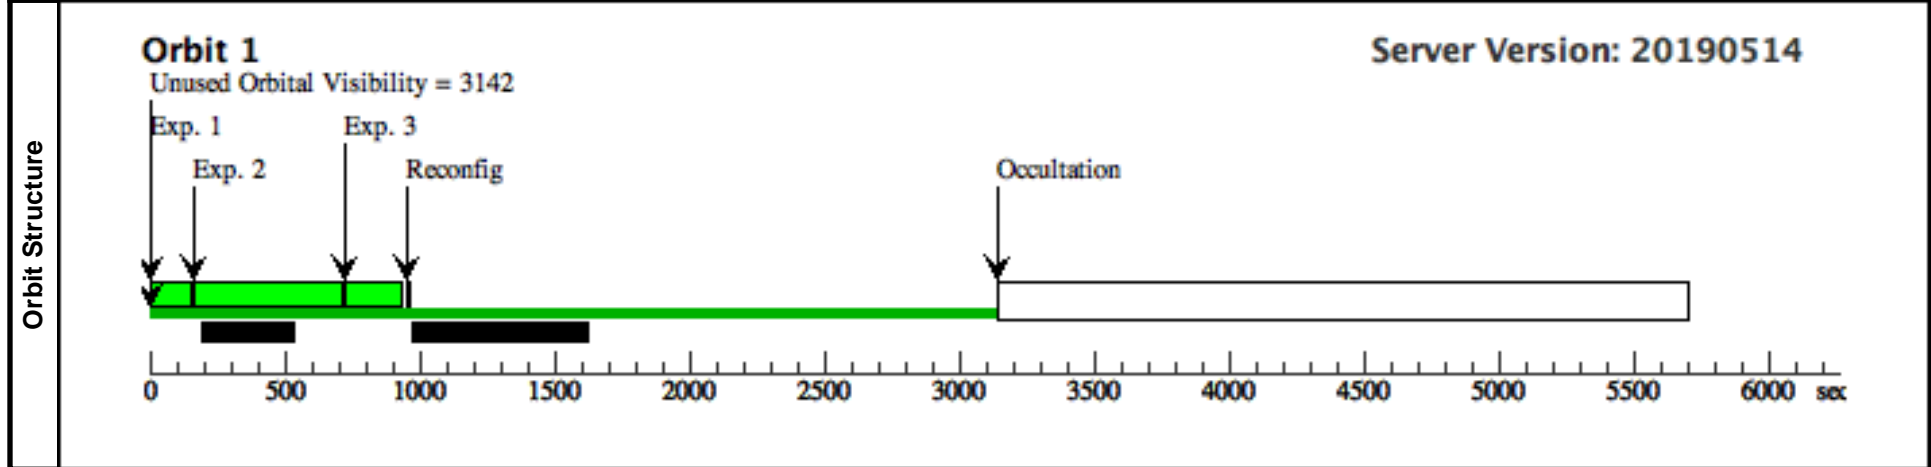


Proposal 15730 - Tu (06) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:44 GMT 2019

Visit
Proposal 15730, Tu (06)
Diagnostic Status: Warning
 Scientific Instruments: WFC3/UVIS
 Special Requirements: BETWEEN 01-MAR-2020:00:00:00 AND 30-APR-2020:00:00:00

Diagnostics
 (Tu (06)) Warning (Orbit Planner): MAXIMUM DURATION EXCEEDED FOR INTERNAL OR EARTH CALIB SU
 (Tu - Flat #1 F625W (06.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F689M (06.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F410M (06.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F555W (06.004)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit
1	Tu - Flat #1 F625W	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F625W				5.9 Secs (5.9 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									
2	Tu - Flat #1 F689M	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F689M				8.5 Secs (8.5 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									
3	Tu - Flat #1 F410M	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F410M				1200 Secs (1200 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									
4	Tu - Flat #1 F555W	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F555W				14.4 Secs (14.4 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									

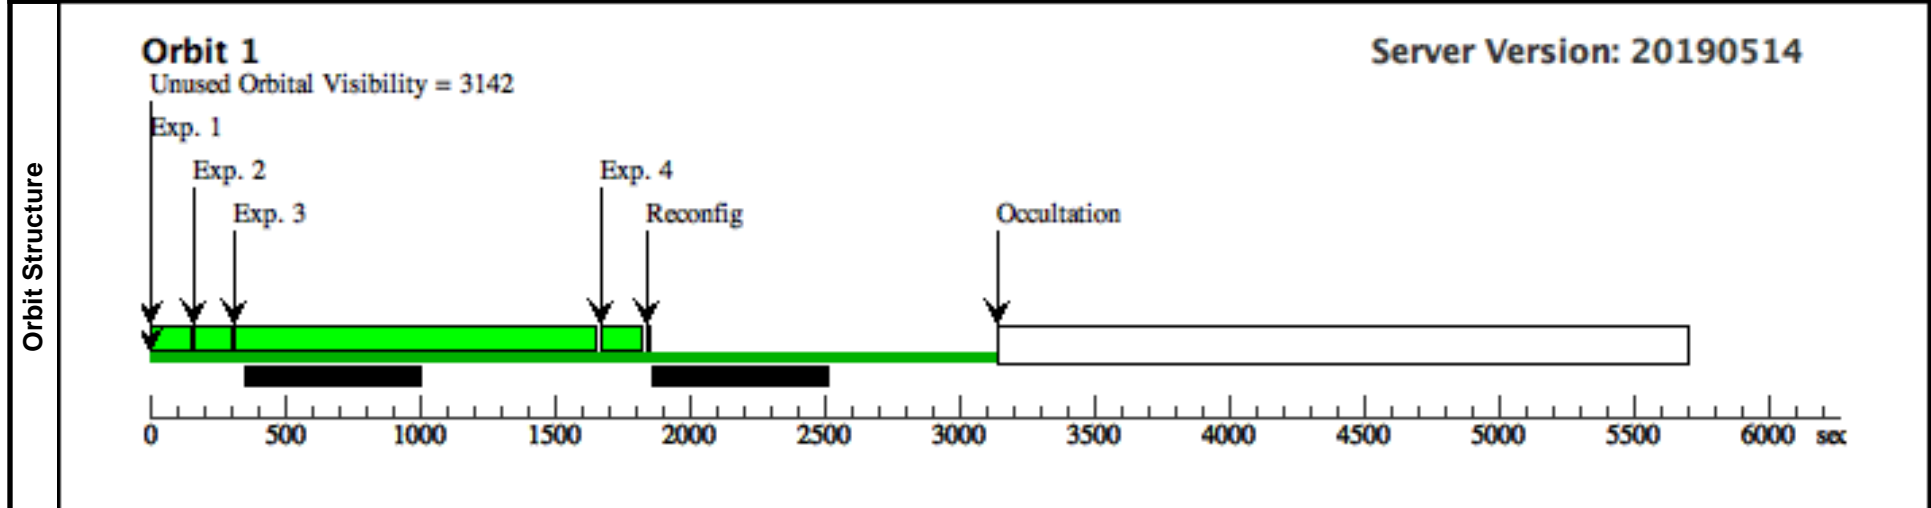


Proposal 15730 - Tu (07) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:44 GMT 2019

Visit	Proposal 15730, Tu (07) Diagnostic Status: Warning Scientific Instruments: WFC3/UVIS Special Requirements: BETWEEN 01-MAR-2020:00:00:00 AND 30-APR-2020:00:00:00
--------------	---

Diagnostics	(Tu (07)) Warning (Orbit Planner): MAXIMUM DURATION EXCEEDED FOR INTERNAL OR EARTH CALIB SU
	(Tu - Flat #1 F621M (07.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
	(Tu - Flat #1 FQ508N (07.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
	(Tu - Flat #1 F475X (07.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
	(Tu - Flat #1 F845M (07.004)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

Exposures	#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit	
	1	Tu - Flat #1 F621M	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F621M					14.8 Secs (14.8 Secs) [==>]	[1]
	<i>Comments: #1 of 1 flats in set A-Tu</i>										
	2	Tu - Flat #1 FQ508N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS-QUAD	FQ508N					490.2 Secs (490.2 Secs) [==>]	[1]
	<i>Comments: #1 of 1 exp in set A-Tu, 2 exp per flat</i>										
3	Tu - Flat #1 F475X	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F475X					15.6 Secs (15.6 Secs) [==>]	[1]	
<i>Comments: #1 of 1 flats in set A-Tu</i>											
4	Tu - Flat #1 F845M	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F845M					5.2 Secs (5.2 Secs) [==>]	[1]	
<i>Comments: #1 of 1 flats in set A-Tu</i>											

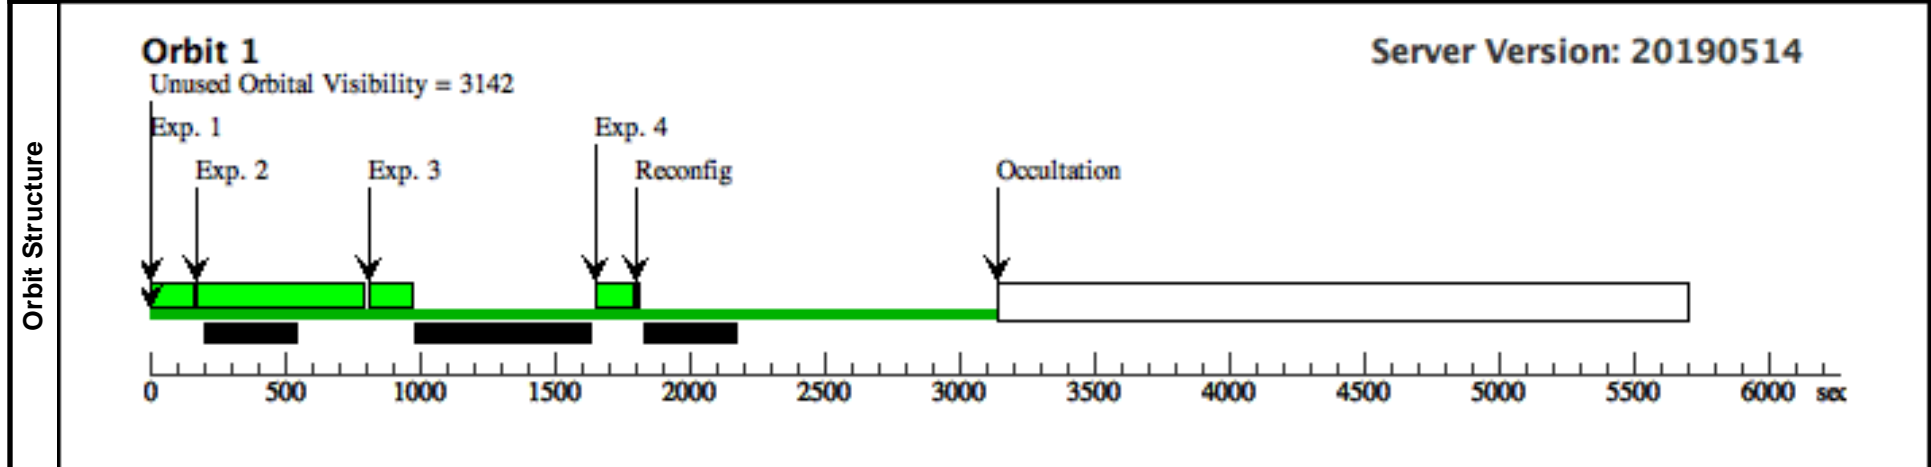


Proposal 15730 - Tu (08) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:44 GMT 2019

Visit
Proposal 15730, Tu (08)
Diagnostic Status: Warning
 Scientific Instruments: WFC3/UVIS
 Special Requirements: BETWEEN 01-MAR-2020:00:00:00 AND 30-APR-2020:00:00:00

Diagnostics
 (Tu (08)) Warning (Orbit Planner): MAXIMUM DURATION EXCEEDED FOR INTERNAL OR EARTH CALIB SU
 (Tu - Flat #1 F665N (08.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F673N (08.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F775W (08.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F850LP (08.004)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit
1	Tu - Flat #1 F665N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F665N				52.4 Secs (52.4 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									
2	Tu - Flat #1 F673N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F673N				54.5 Secs (54.5 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									
3	Tu - Flat #1 F775W	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F775W				3.1 Secs (3.1 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									
4	Tu - Flat #1 F850LP	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F850LP				3.6 Secs (3.6 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									

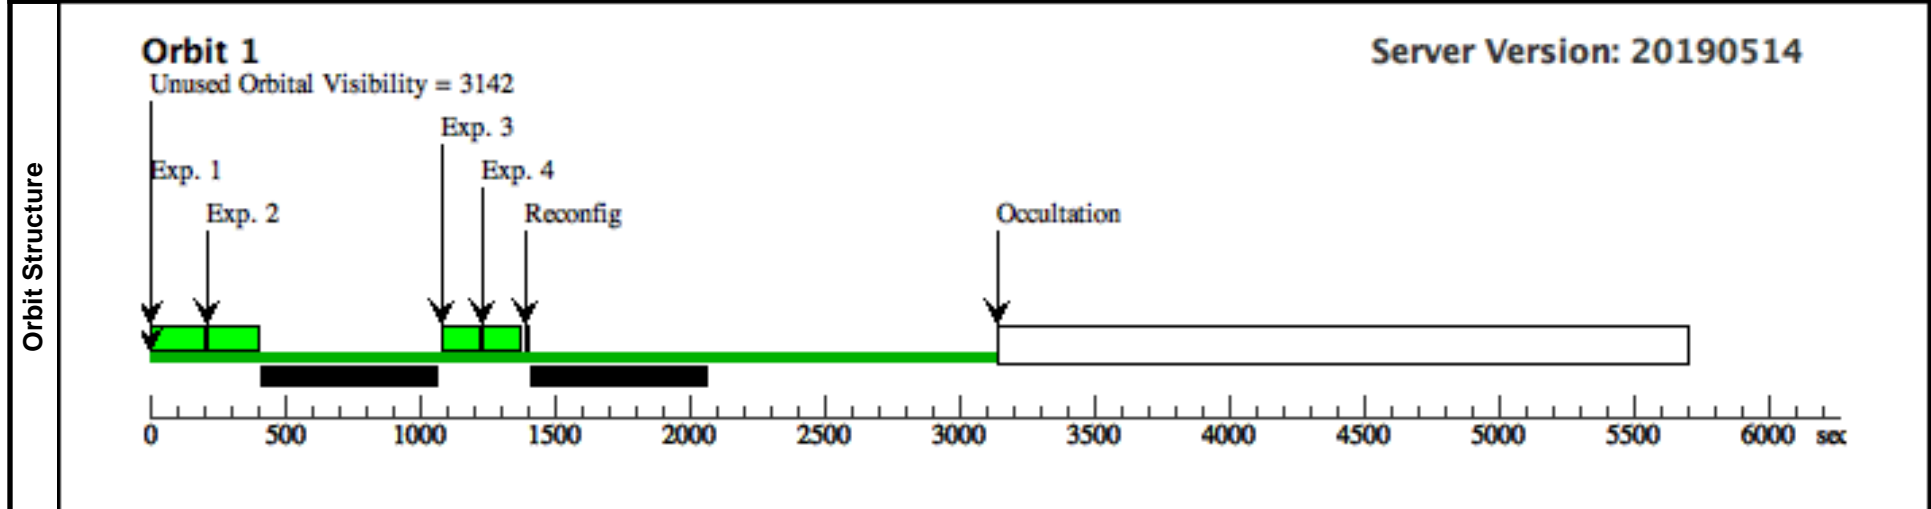


Proposal 15730 - Tu (09) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:44 GMT 2019

Visit	Proposal 15730, Tu (09) Diagnostic Status: Warning Scientific Instruments: WFC3/UVIS Special Requirements: BETWEEN 01-MAR-2020:00:00:00 AND 30-APR-2020:00:00:00
--------------	---

Diagnostics	(Tu (09)) Warning (Orbit Planner): MAXIMUM DURATION EXCEEDED FOR INTERNAL OR EARTH CALIB SU
	(Tu - Flat #1 F680N (09.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
	(Tu - Flat #1 F656N (09.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
	(Tu - Flat #1 F547M (09.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
	(Tu - Flat #1 F645N (09.004)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

Exposures	#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit	
	1	Tu - Flat #1 F680N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F680N					15.7 Secs (15.7 Secs) [==>]	[1]
	<i>Comments: #1 of 1 flats in set A-Tu</i>										
	2	Tu - Flat #1 F656N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F656N					444.0 Secs (444 Secs) [==>]	[1]
	<i>Comments: #1 of 1 flats in set A-Tu</i>										
3	Tu - Flat #1 F547M	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F547M					37.5 Secs (37.5 Secs) [==>]	[1]	
<i>Comments: #1 of 3 flats in set A-Tu</i>											
4	Tu - Flat #1 F645N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F645N					99.6 Secs (99.6 Secs) [==>]	[1]	
<i>Comments: #1 of 1 flats in set A-Tu</i>											

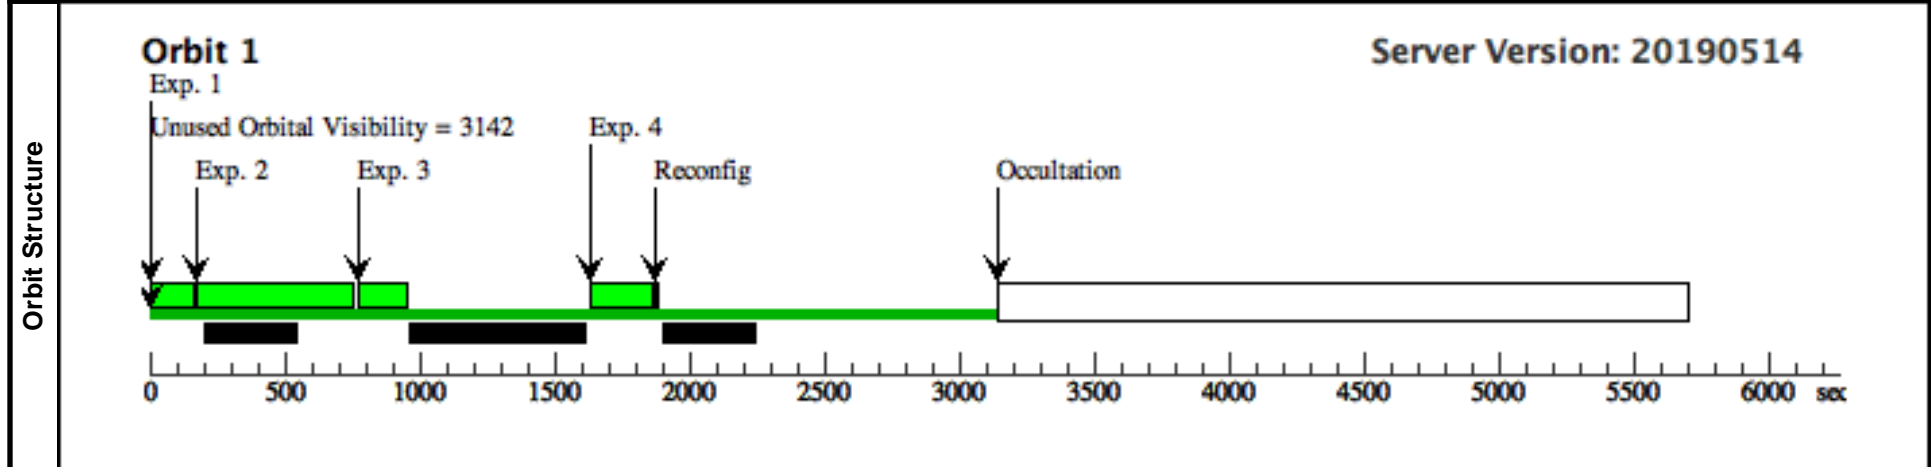


Proposal 15730 - Tu (10) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:44 GMT 2019

Visit
Proposal 15730, Tu (10)
Diagnostic Status: Warning
 Scientific Instruments: WFC3/UVIS
 Special Requirements: BETWEEN 01-MAR-2020:00:00:00 AND 30-APR-2020:00:00:00

Diagnostics
 (Tu (10)) Warning (Orbit Planner): MAXIMUM DURATION EXCEEDED FOR INTERNAL OR EARTH CALIB SU
 (Tu - Flat #1 F475W (10.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F657N (10.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F487N (10.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 FQ889N (10.004)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit
1	Tu - Flat #1 F475W	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F475W				42.7 Secs (42.7 Secs) [==>]	[1]
<i>Comments: #1 of 3 flats in set A-Tu</i>									
2	Tu - Flat #1 F657N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F657N				57.2 Secs (57.2 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									
3	Tu - Flat #1 F487N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F487N				1052.6 Secs (1052.6 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									
4	Tu - Flat #1 FQ889N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS-QUAD	FQ889N				57.5 Secs (57.5 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									

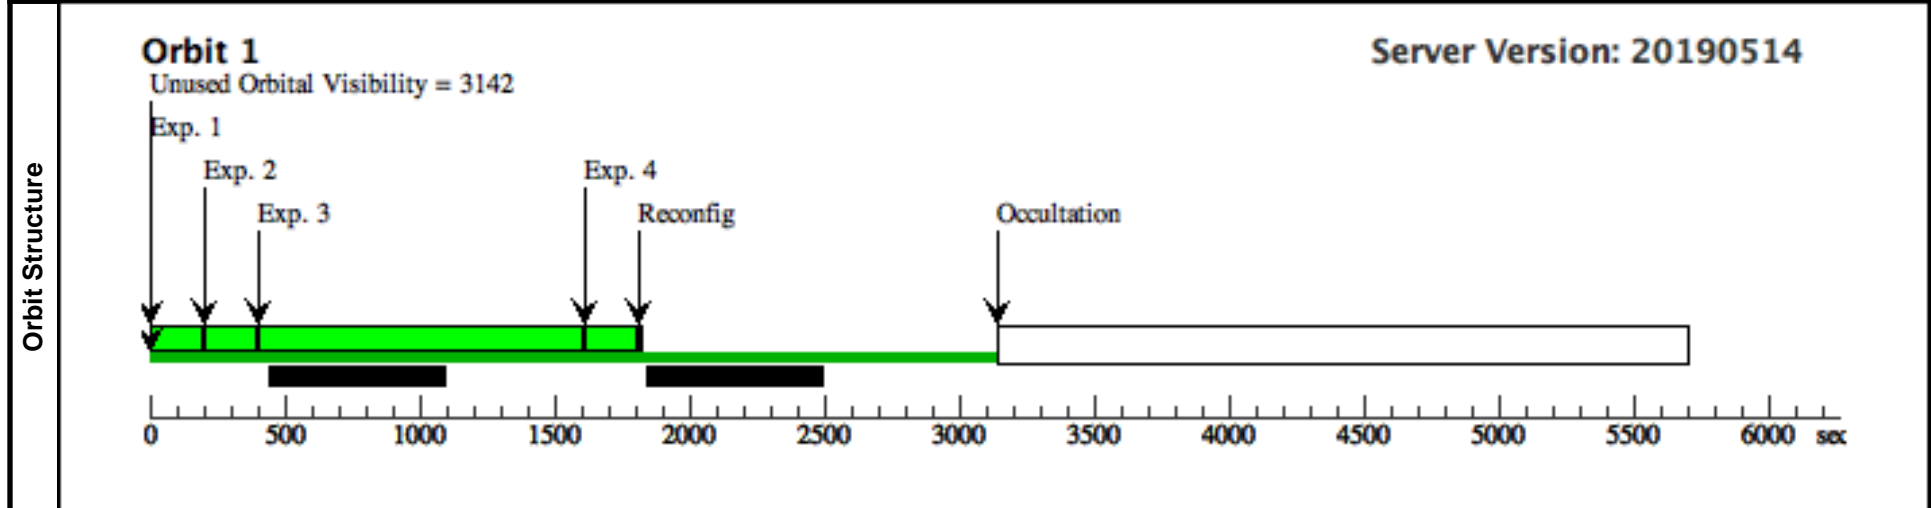


Proposal 15730 - Tu (11) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:44 GMT 2019

Visit
Proposal 15730, Tu (11)
Diagnostic Status: Warning
 Scientific Instruments: WFC3/UVIS
 Special Requirements: BETWEEN 01-MAR-2020:00:00:00 AND 30-APR-2020:00:00:00

Diagnostics
 (Tu (11)) Warning (Orbit Planner): MAXIMUM DURATION EXCEEDED FOR INTERNAL OR EARTH CALIB SU
 (Tu - Flat #1 FQ619N (11.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F631N (11.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F502N (11.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat #1 F658N (11.004)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit
1	Tu - Flat #1 FQ619N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS-QUAD	FQ619N				101.3 Secs (101.3 Secs) [==>]	[1]
<i>Comments: #2 of 2 exp in set A-Tu, 2 exp per flat</i>									
2	Tu - Flat #1 F631N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F631N				161.6 Secs (161.6 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									
3	Tu - Flat #1 F502N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F502N				742.1 Secs (742.1 Secs) [==>]	[1]
<i>Comments: #1 of 3 flats in set A-Tu</i>									
4	Tu - Flat #1 F658N	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F658N				173.2 Secs (173.2 Secs) [==>]	[1]
<i>Comments: #1 of 1 flats in set A-Tu</i>									

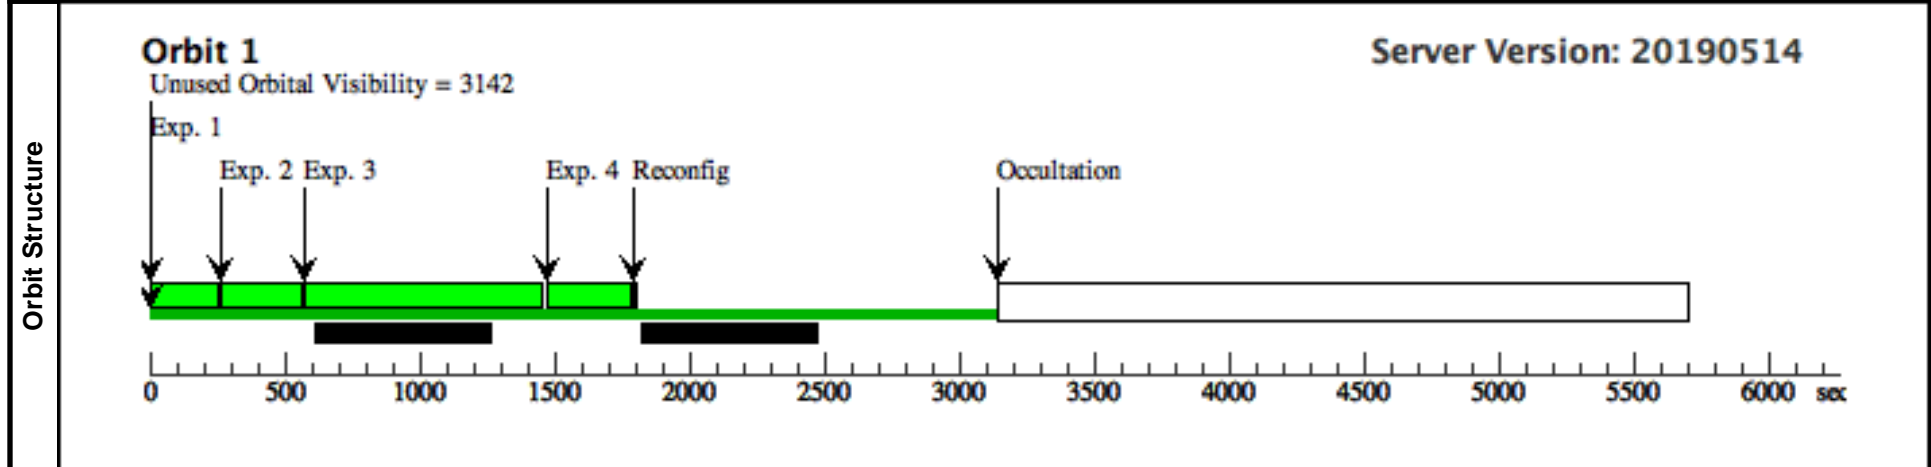


Proposal 15730 - Tu early (12) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:44 GMT 2019

Visit
Proposal 15730, Tu early (12)
Diagnostic Status: Warning
 Scientific Instruments: WFC3/UVIS
 Special Requirements: BETWEEN 01-DEC-2019:00:00:00 AND 01-JAN-2020:00:00:00

Diagnostics
 (Tu early (12)) Warning (Orbit Planner): MAXIMUM DURATION EXCEEDED FOR INTERNAL OR EARTH CALIB SU
 (Tu - Flat F606W (12.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat F438W (12.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat F390W (12.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
 (Tu - Flat F814W (12.004)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit
1	Tu - Flat F606W	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F606W				4.9 Secs (4.9 Secs) [==>]	[1]
<i>Comments: #1 of 4 flats in set A-Tu</i>									
2	Tu - Flat F438W	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F438W				350 Secs (350 Secs) [==>]	[1]
3	Tu - Flat F390W	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F390W				525 Secs (525 Secs) [==>]	[1]
4	Tu - Flat F814W	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F814W				2.0 Secs (2 Secs) [==>]	[1]
<i>Comments: #1 of 4 flats in set A-Tu</i>									

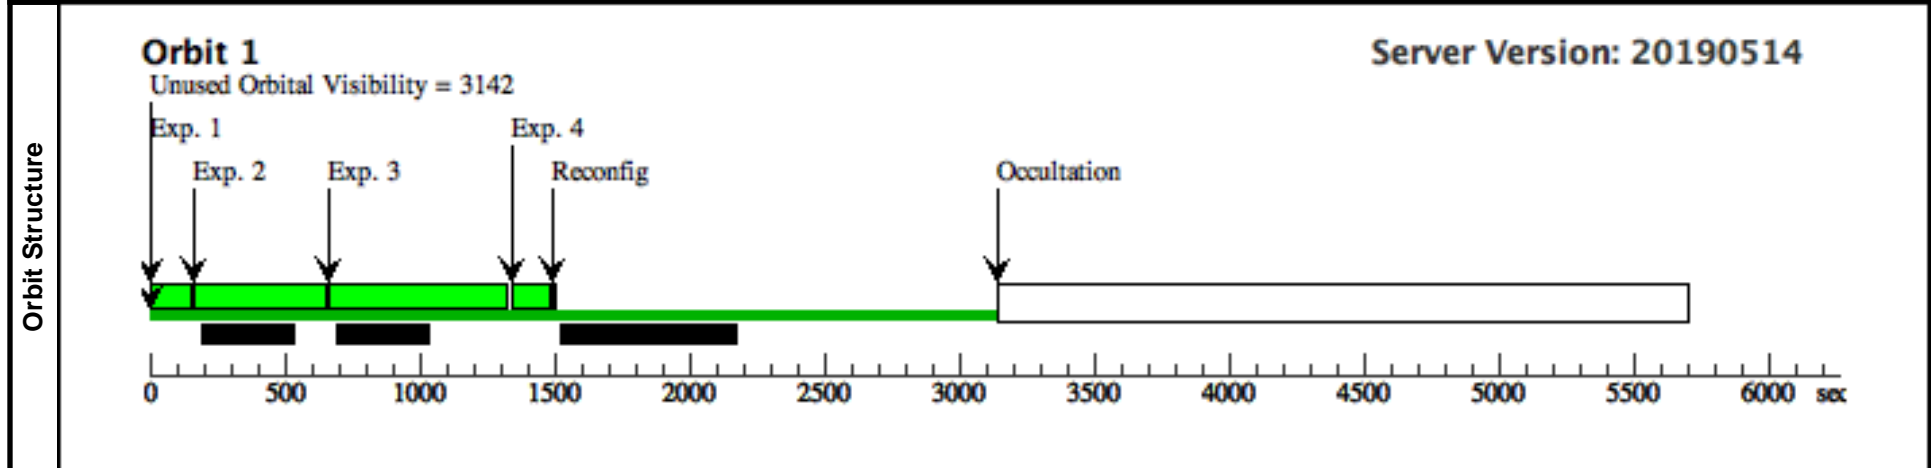

Proposal 15730 - Tu late (13) - WFC3 UVIS Internal Flats

Wed Jul 10 19:00:44 GMT 2019

Visit	Proposal 15730, Tu late (13) Diagnostic Status: Warning Scientific Instruments: WFC3/UVIS Special Requirements: BETWEEN 01-JUN-2020:00:00:00 AND 01-JUL-2020:00:00:00
--------------	--

Diagnostics	(Tu late (13)) Warning (Orbit Planner): MAXIMUM DURATION EXCEEDED FOR INTERNAL OR EARTH CALIB SU
	(Tu - Flat F606W (13.001)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
	(Tu - Flat F438W (13.002)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
	(Tu - Flat F390W (13.003)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser
	(Tu - Flat F814W (13.004)) Warning (Form): FLASH level may be too low for this exposure or a short subexposure. See extended explanation in the diagnostic browser

Exposures	#	Label	Target	Config,Mode,Aperture	Spectral Els.	Opt. Params.	Special Reqs.	Groups	Exp. Time (Total)/[Actual Dur.]	Orbit	
	1	Tu - Flat F606W	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F606W					4.9 Secs (4.9 Secs) [==>]	[1]
	<i>Comments: #1 of 4 flats in set A-Tu</i>										
	2	Tu - Flat F438W	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F438W					350 Secs (350 Secs) [==>]	[1]
	3	Tu - Flat F390W	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F390W					525 Secs (525 Secs) [==>]	[1]
4	Tu - Flat F814W	TUNGSTEN	WFC3/UVIS, ACCUM, UVIS	F814W					2.0 Secs (2 Secs) [==>]	[1]	
<i>Comments: #1 of 4 flats in set A-Tu</i>											

